


## STONETECO Bathtub Installation Guide


Thanks for buying STONETECO Stone Resin Bathtub. Following is the installation guide to set up this bathware in the right place, the right way.

### Caution


- \* Solid Surface Bathtubs and other bathware are heavy products with an average weight of 120-250Kg; make sure you use lifting truck for moving crate packaging from one place to another.

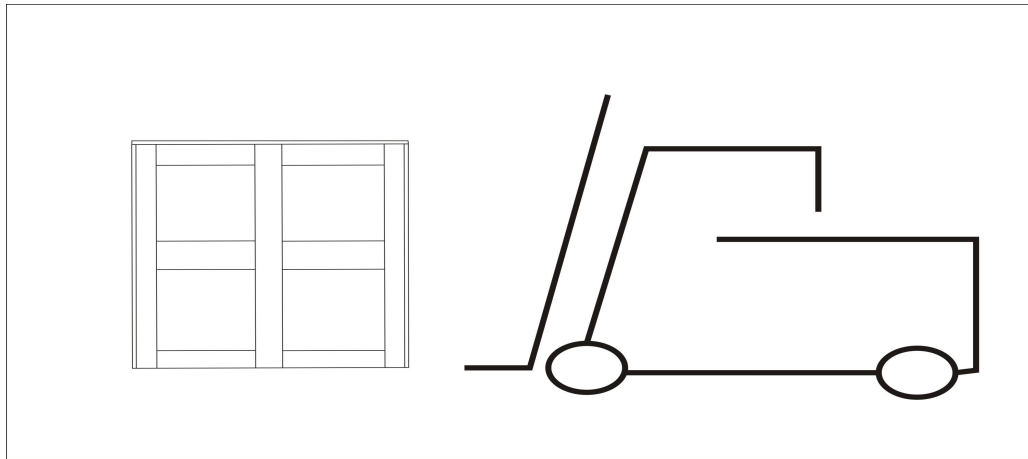

- \* Make sure you don't take off the protection packaging on the tub before installation.

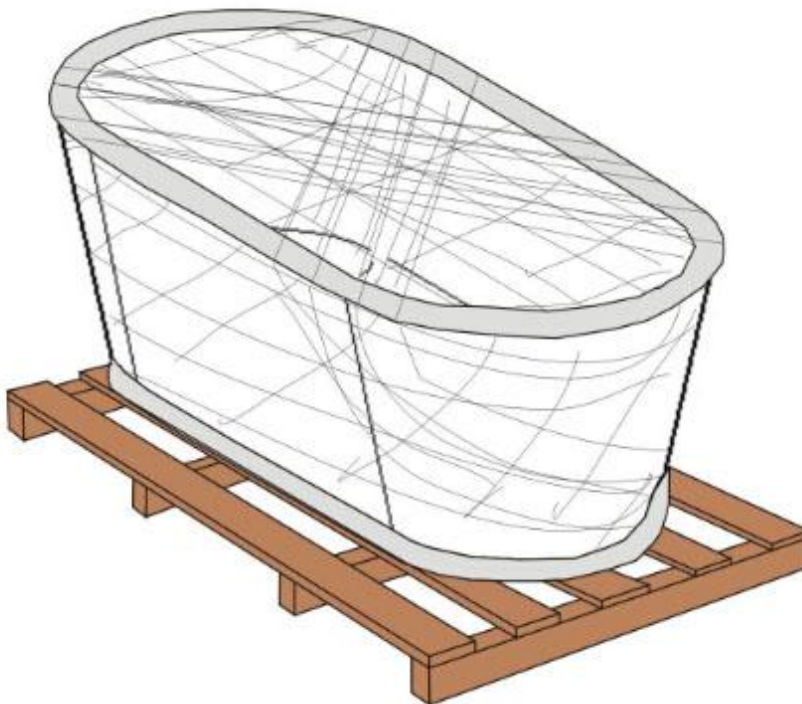

- \* Make sure the floor is properly leveled.

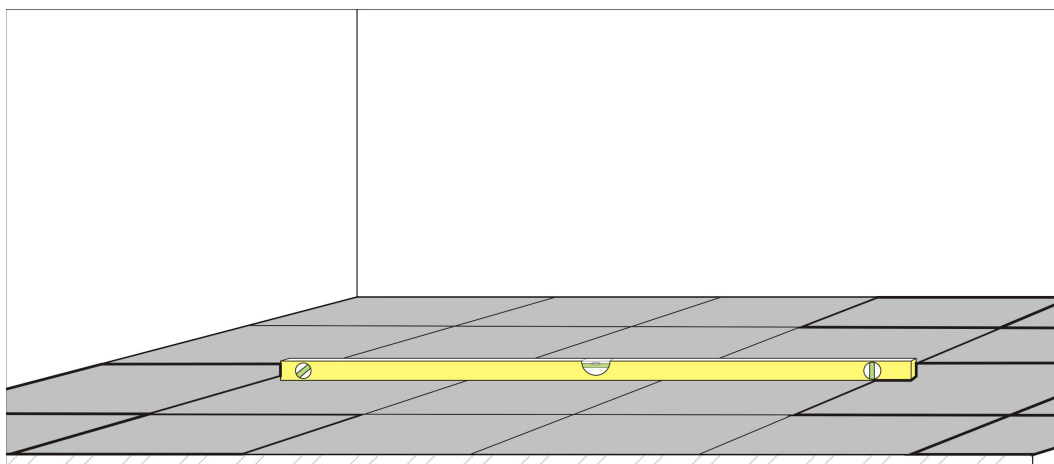


\*Use soft surface like carpet or pad below the tub in order to avoid interaction to too hard surfaces that could damage the tub.

\*Make sure the bathtub is intact and no accessory has been lost during the shipping process.

### Installation


1. Put the bathtub on the exact stop and take off the wooden packaging but do not take off the protection film.

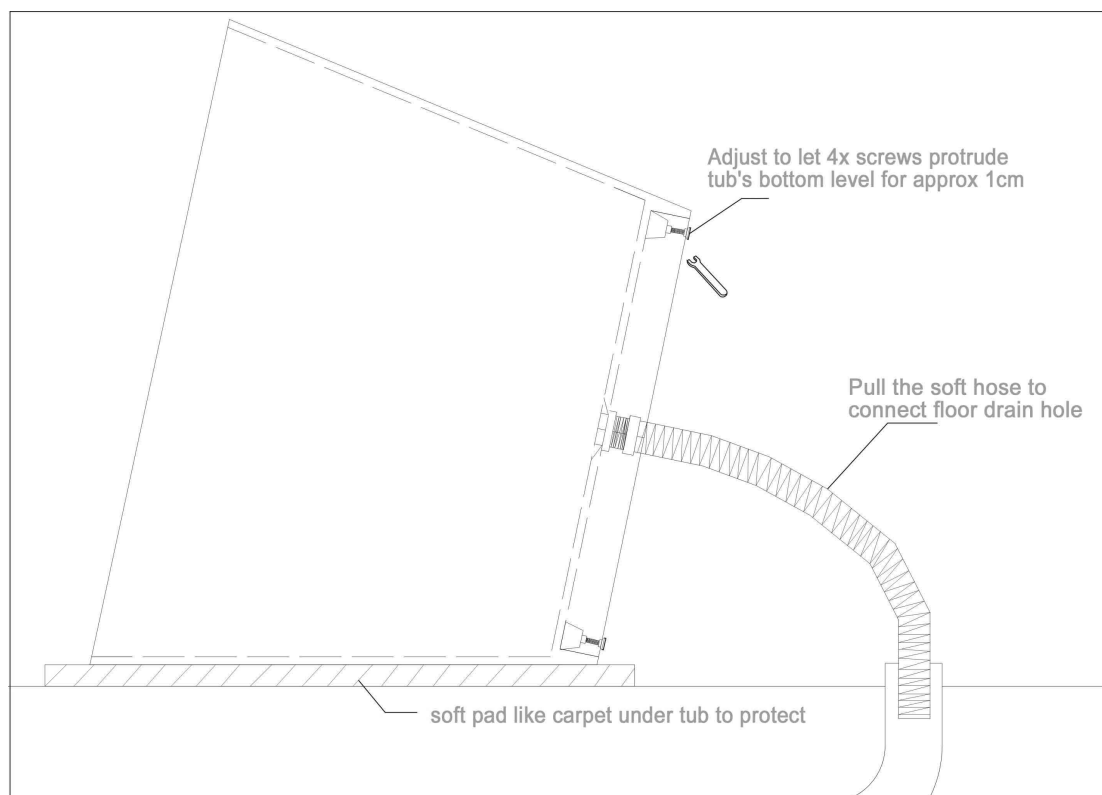


2. Spot the discharge pipe and before connecting drain pipe with the sewer, you can take

off the protection.

3. Make sure the drain slot is facing overflow slot while installing the tub

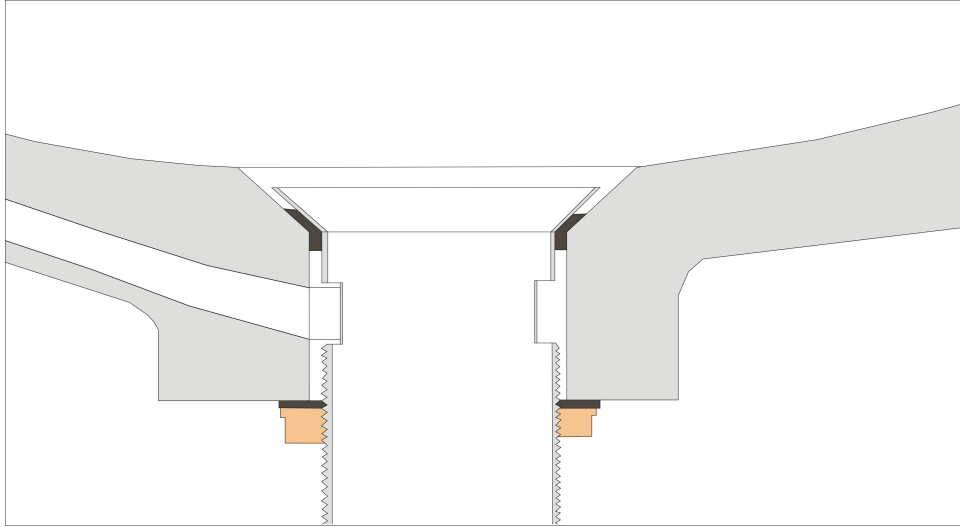

4. Properly level the tub and use screws to tighten it on the right spot.

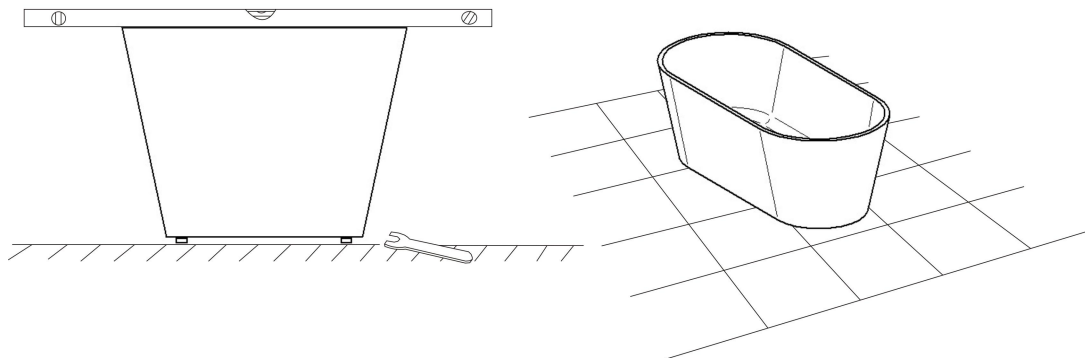

5. Put water in the tub and leave it for few hours to detect any leakage.

Feel free to contact us via [info@stoneteco.com](mailto:info@stoneteco.com) if you have any query.